


# SKY600AR WORKING RADIUS 전방

(SKY600AR-A60E0)


Front working radius  
 Outriggers fully extended  
 Depending on the length of the outrigger extension, the working radius is different.  
 If the length of the outrigger extension is less than 100mm, it will not work.

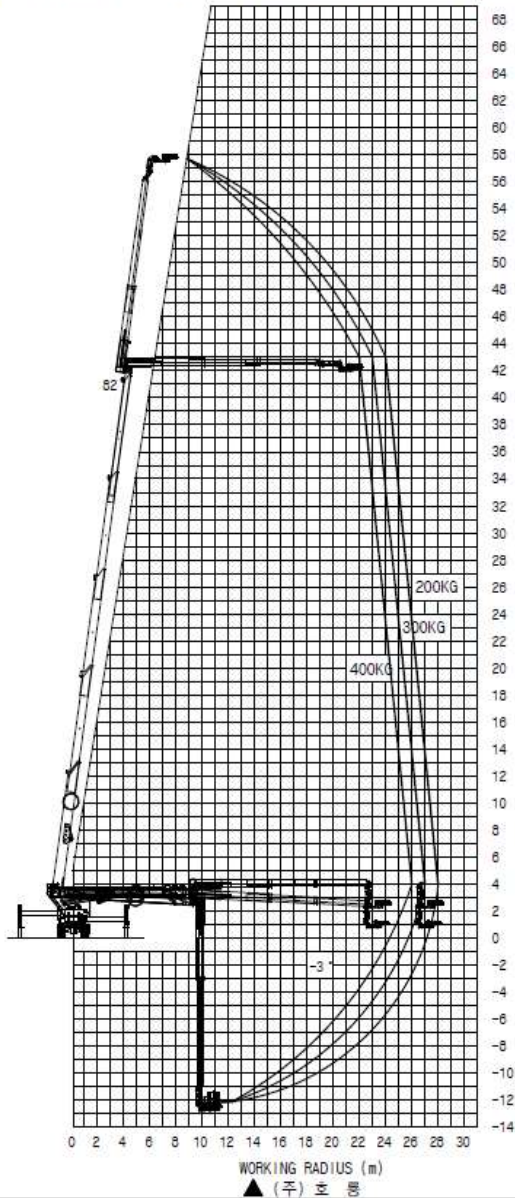

# SKY600AR WORKING RADIUS 측방

(SKY600AR-A60E0)

Side working radius  
 Outriggers fully extended  
 Depending on the length of the outrigger extension, the working radius is different.  
 If the length of the outrigger extension is less than 100mm, it will not work.

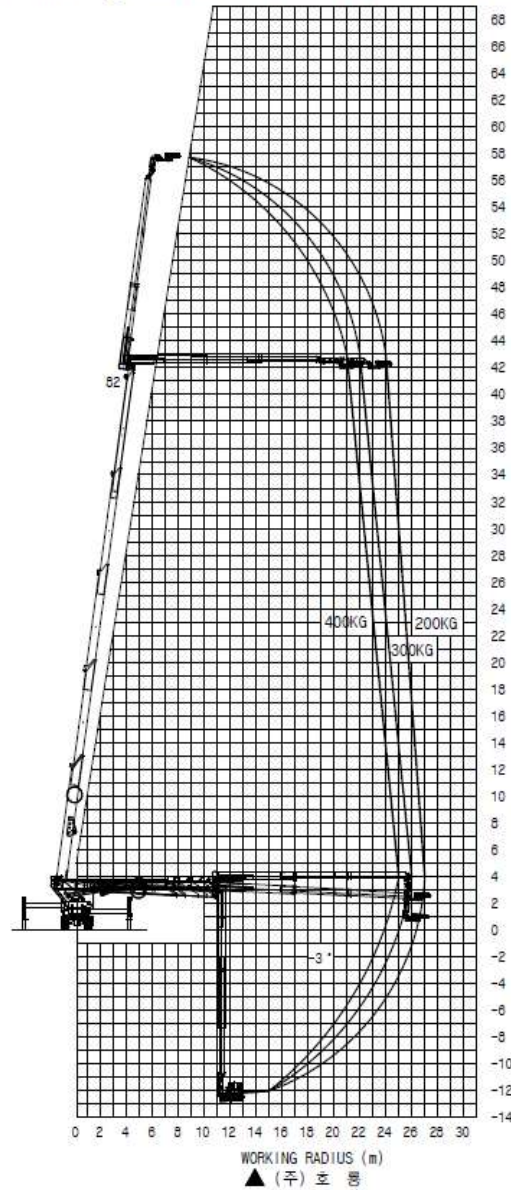

# SKY600AR WORKING RADIUS 후방

(SKY600AR-A60E0)

Rear working radius  
 Outriggers fully extended  
 Depending on the length of the outrigger extension, the working radius is different.  
 If the length of the outrigger extension is less than 100mm, it will not work.

